

PLANNING & APPLICATION UNI-RIVET MANUAL



Disclaimer

The information in this manual is by no means exhaustive. This document has been developed to assist with the correct preparation and installation of EQUITONE panels. For full and detailed information about storage, handling, preparation, and design and installation requirements of EQUITONE, refer to EQUITONE Planning and Application Guide and other available EQUITONE relevant technical documents.

Refer to EQUITONE Material Safety Data Sheets (MSDS) or Safety Information Sheets (SIS) for more information about health and safety, including common hazards associated with working with EQUITONE, and measures to minimize risk.

The information in this document is correct at the time of issuing. However, due to our committed program of continuous material and system development we reserve the right to amend or alter the information contained in this document without prior notice. Please contact your local EQUITONE sales organization or visit www.equitone.com to ensure you have the most current version.

This document is supplied in good faith and no liability can be accepted for any loss or damage resulting from its use. Images and construction details contained in this document are not to a specific scale, and are indicative and for illustration purposes only.

This document is protected by International copyright laws. Reproduction and distribution in whole or in part without prior written permission is strictly prohibited. EQUITONE and logos are trademarks of Etex NV or an affiliate thereof. Any use without authorization is strictly prohibited and may violate trademark laws.

1

TABLE OF CONTENTS

TOOLS & ACCESSORIES

Page 3

STORAGE & HANDLING

Page 4-6



PANEL CUTTING

Tools, Page 7

Panel cutting, Page 8



PANEL EDGE TREATMENT

Tools, Page 9

Panel edge treatment, Page 10-12



PANEL DRILLING

Tools, Page 13

Panel drilling, Page 14-15

Panel drilling EQUITONE [linea], Page 16-17



UNI-RIVET FIXING

Tools, Page 18

UNI-Rivet fixing, Page 19-22



VENTILATION

Page 23




INSTALLATION

Page 24-26





TOOLS & ACCESSORIES

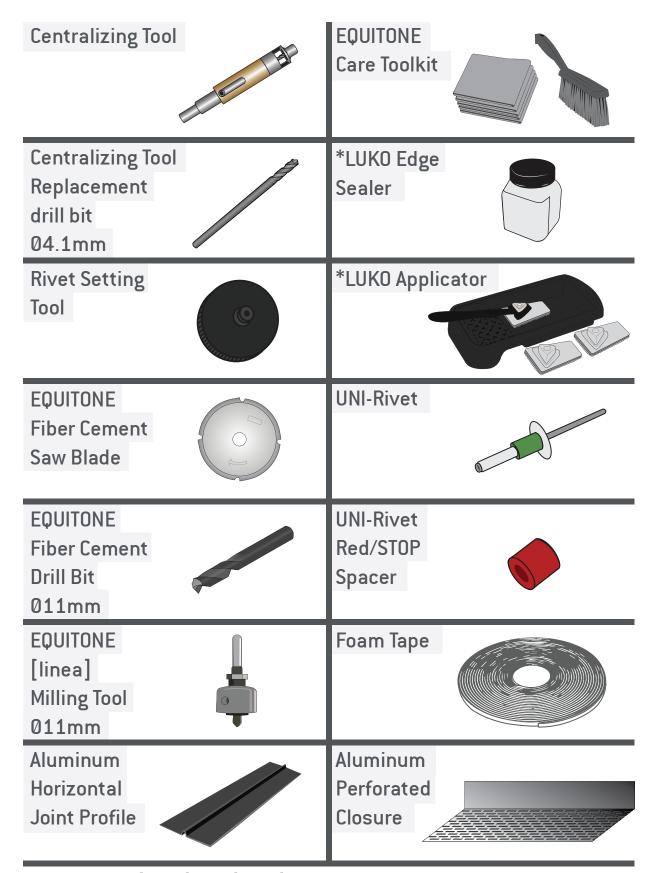



^{*}Only for EQUITONE [natura] PRO & [natura]

STORAGE & HANDLING

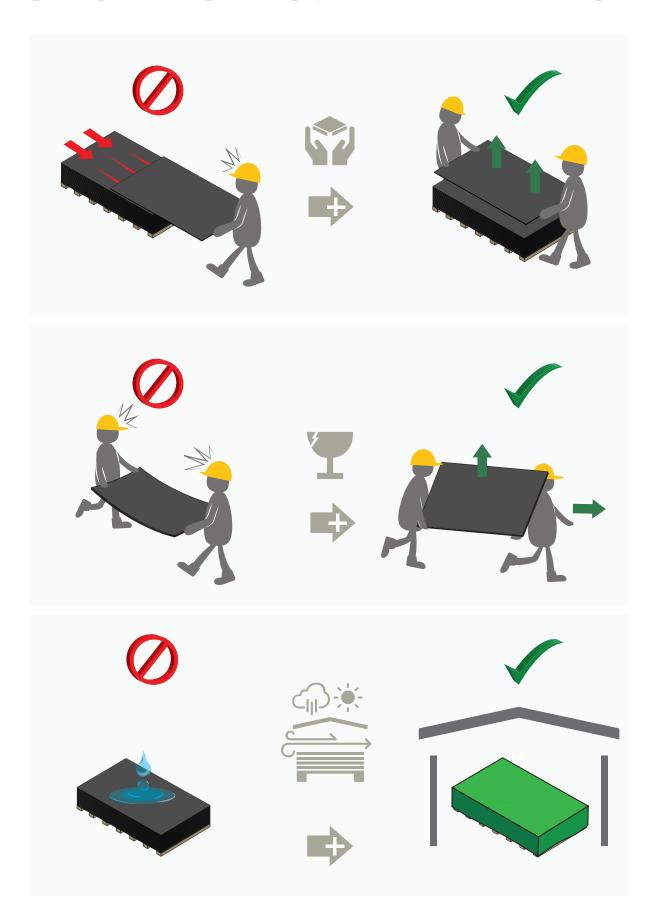


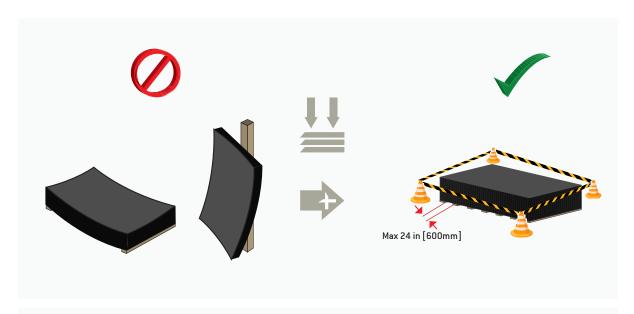


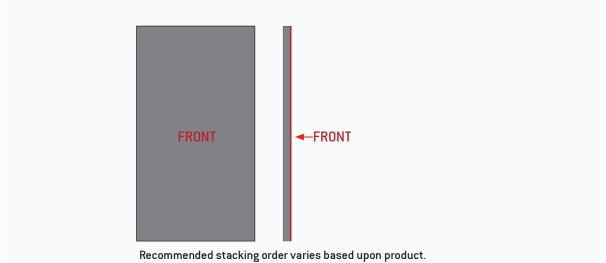


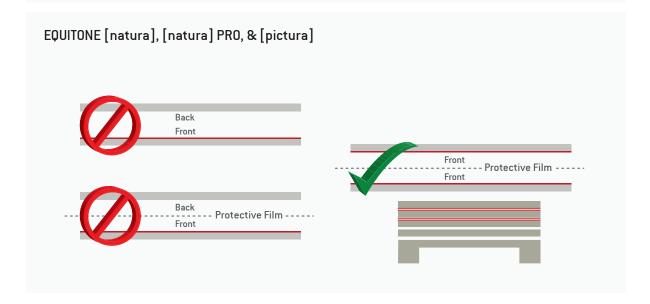

5

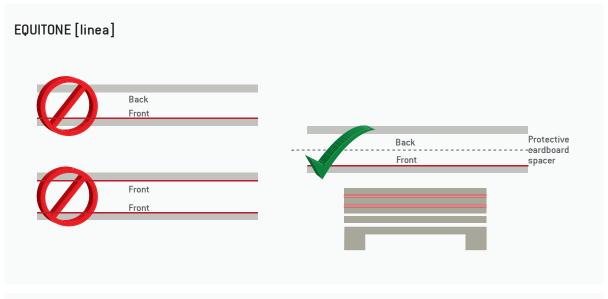

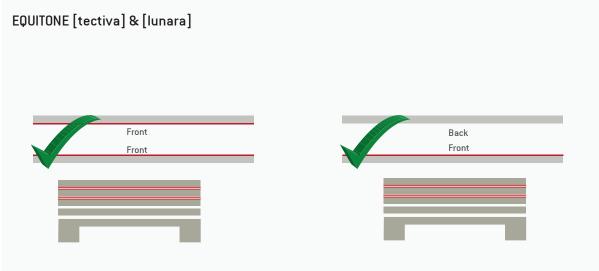

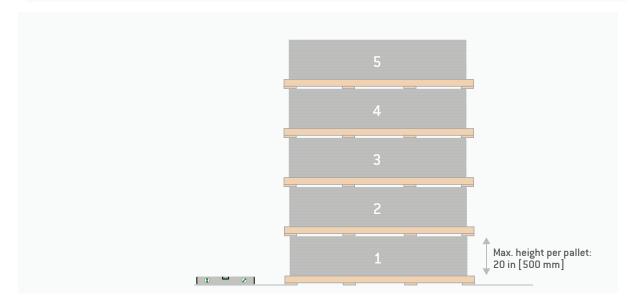


PANEL CUTTING


TOOLS



Dust extraction system

EQUITONE fiber cement saw blade

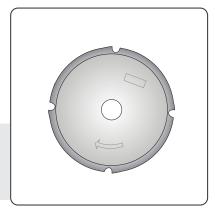

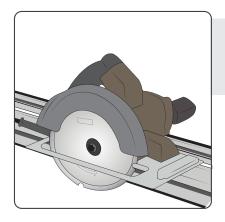

Circular saw & Guide rail


Styrofoam film blade






Stable Work Table
With Sacrificial
Board blade

PANEL CUTTING

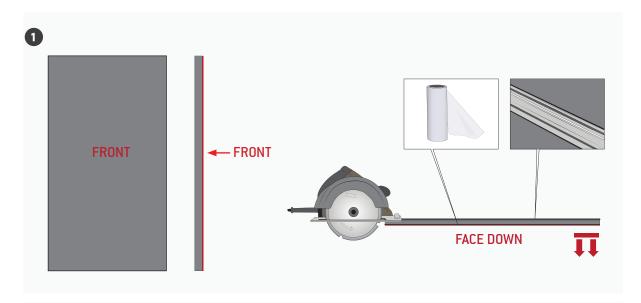

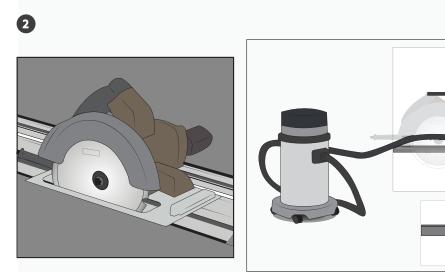

PANEL EDGE TREATMENT

TOOLS



Sandpaper (80 Grit)

Soft bristle brush






Micro fiber cloth, paper towel

LUKO edge sealer & applicator


*For EQUITONE [natura] & [natura] PRO




PANELEDGETREATMENT

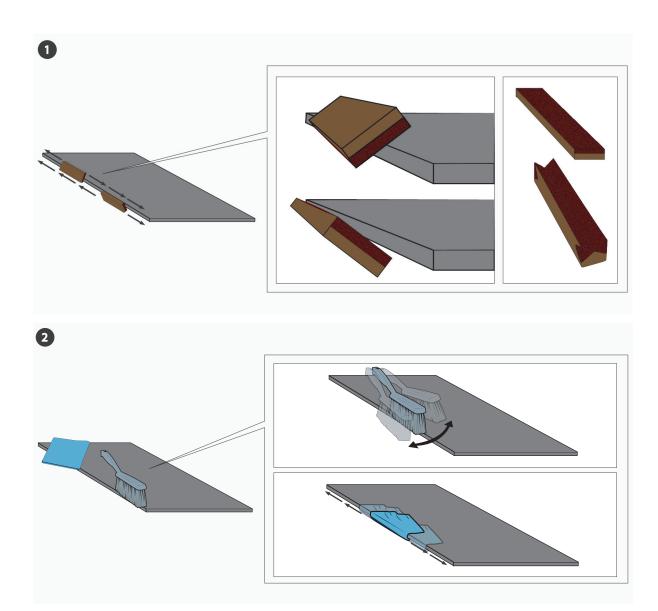


Steps 3 to 7: Only applicable to EQUITONE [natura] & [natura] PRO

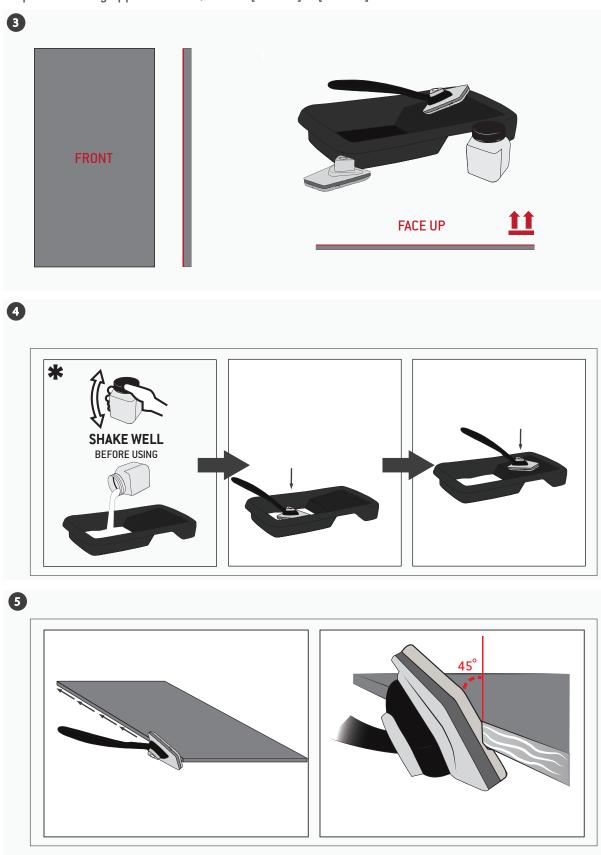


^{*}Pour only enough LUKO into the tray that can be used within 30 minutes.

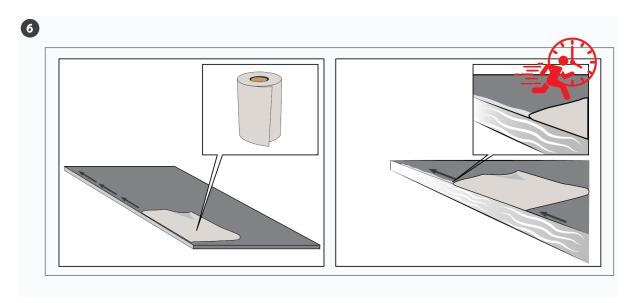

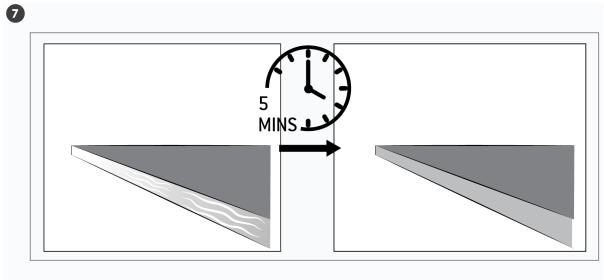

PANEL DRILLING

TOOLS

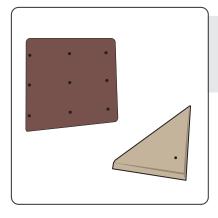

Hole Template (Optional)


EQUITONE Drill Bit 11mm Diameter





G Clamp (Optional)

> EQUITONE [linea] milling tool 11mm Diameter

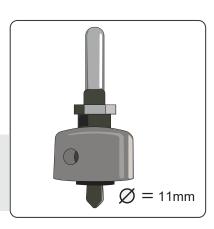





Stable Work Table
With Sacrificial
Board/Fiber Cement

Micro Fiber Towel & Brush





PANEL DRILLING

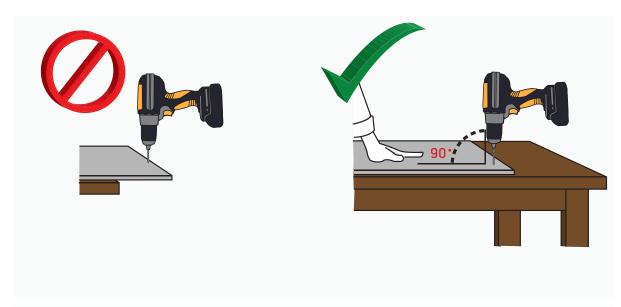


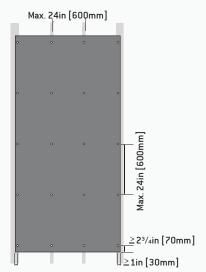

*The distance reduces on higher wind load requirements Max. 16in [400mm] for ceiling/soffit applications.

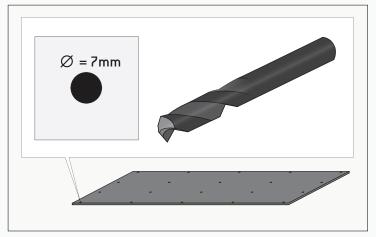


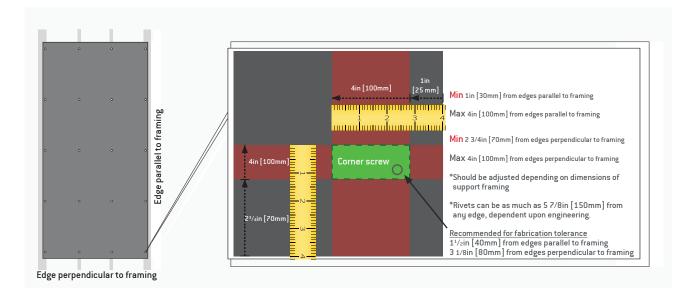

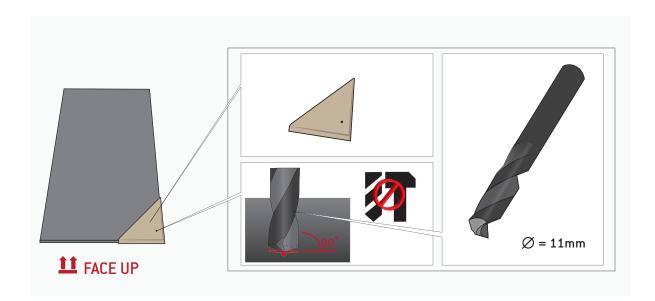


PANEL DRILLING


EQUITONE [linea]

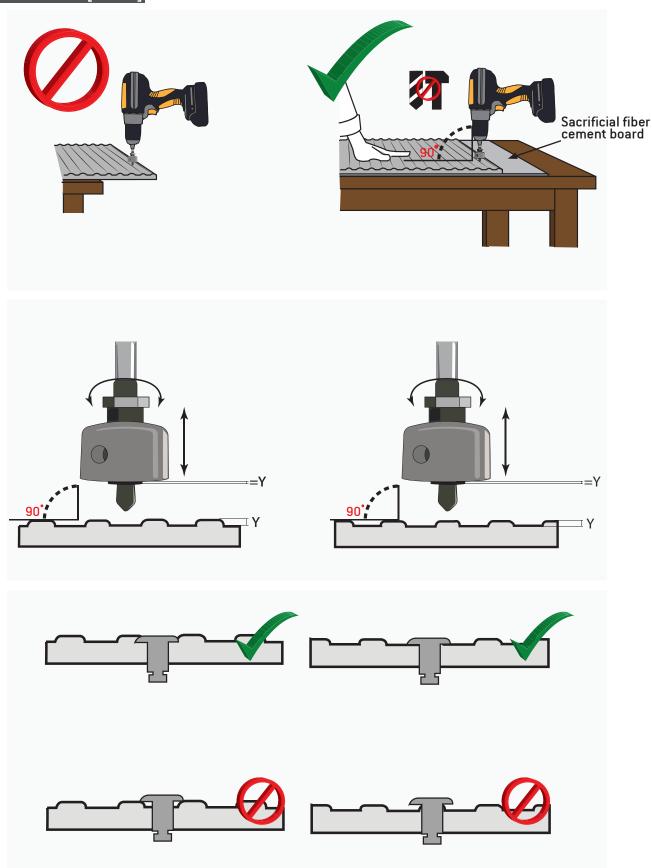


CLEANING

AFTER

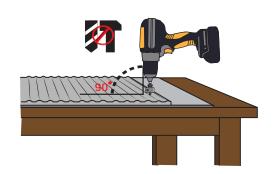


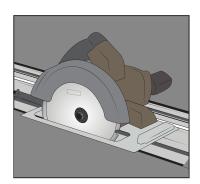

D0

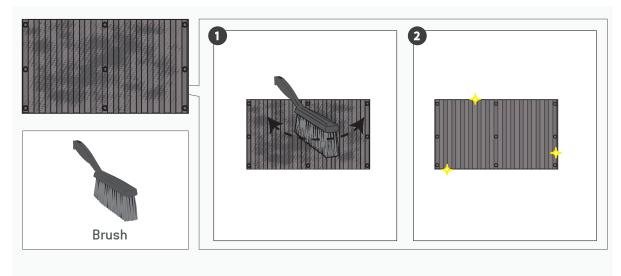

OR

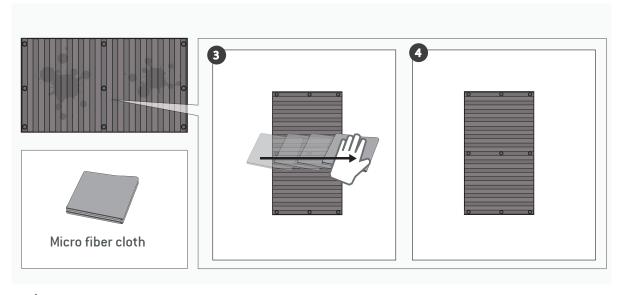

^{*}It is important to clean the panel after any drilling or cutting operation.

UNI-RIVET FIXING


TOOLS



Cordless Drill

Centralizing Tool




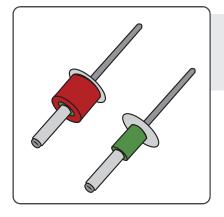

UNI-Rivets

Rivet Setting Tool



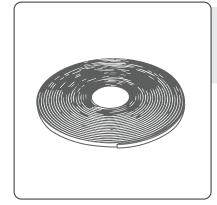



Foam Tape


Rivet Gun



UNI-RIVET FIXING

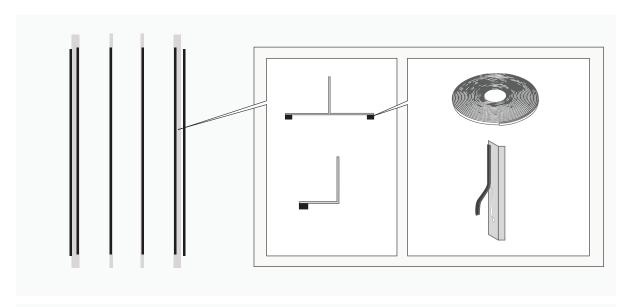


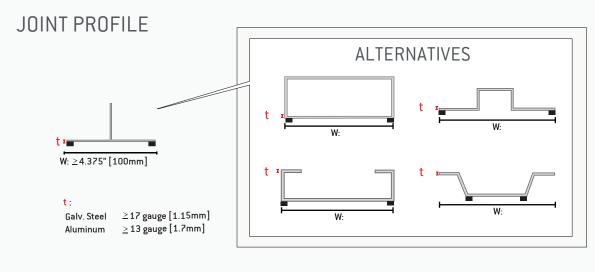

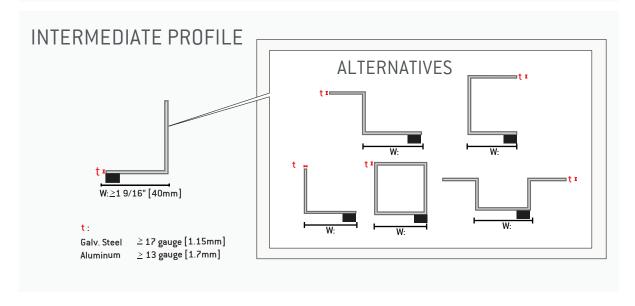


Start with STOP (fixed) points




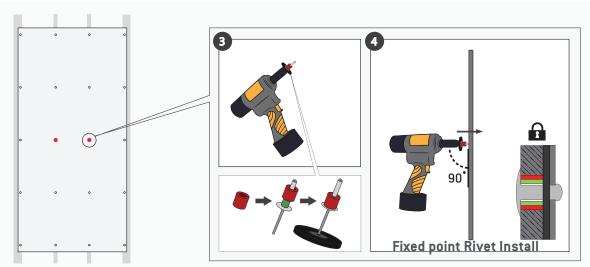




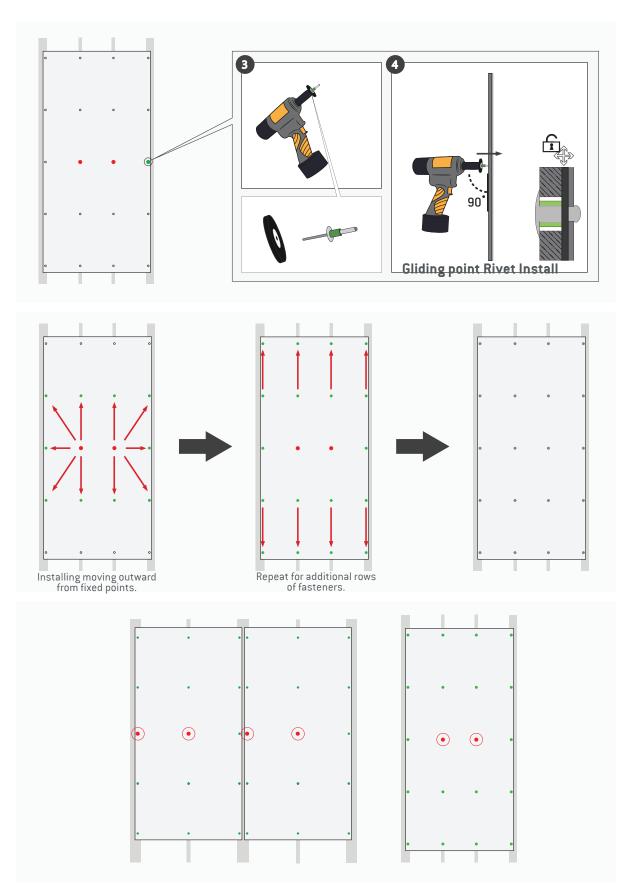

STOP (fixed) points Potential location

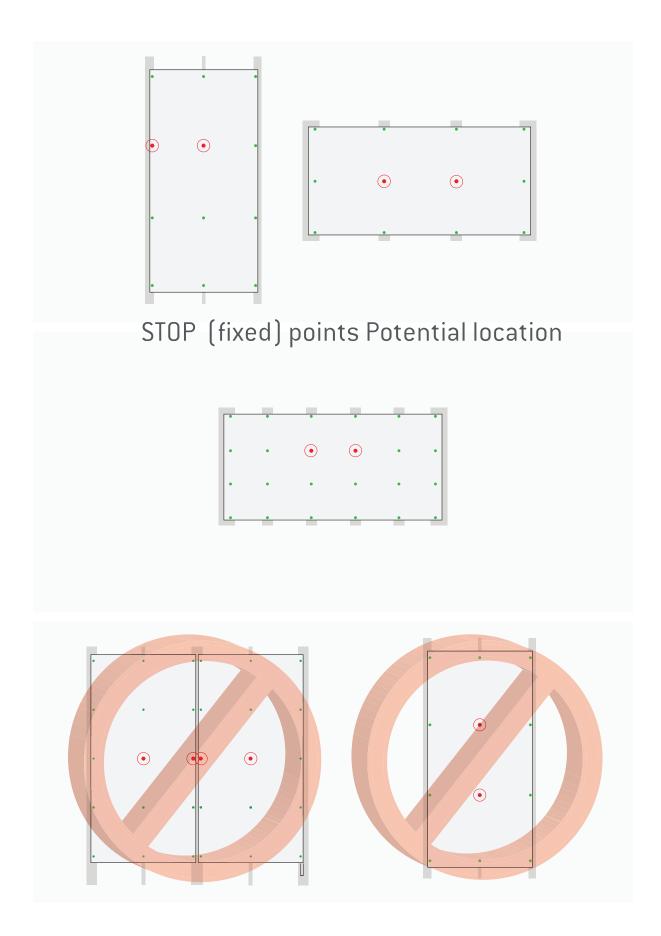

VENTILATION

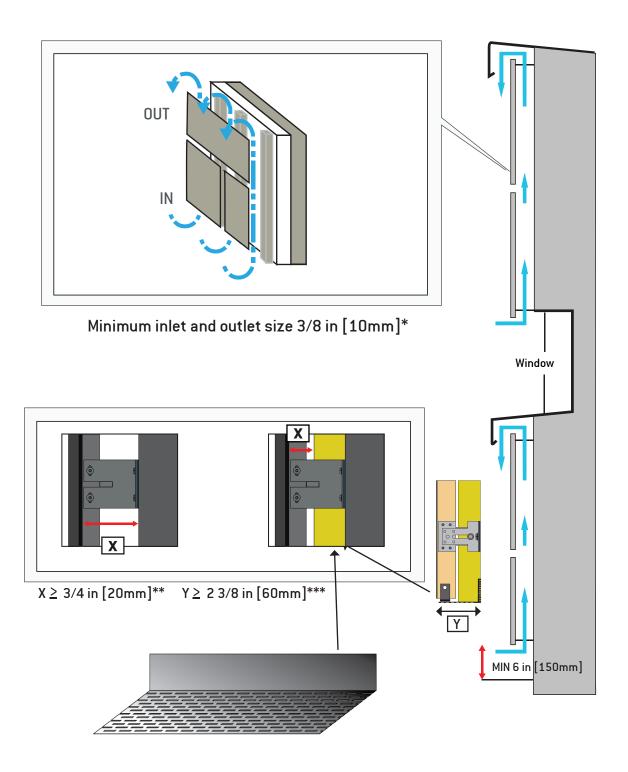


^{*} Inlet and outlet opening sizes should increase as the distance between them increases. Outlet openings should always be less than or equal to the inlet openings.


^{**}Cavity space X increases as the height of the facade & vertical distances IN & OUT increases


^{***}Closure width Y is dependent upon the volume of air the perforations allow. A 33% perforated profile should be 3x wider than the recommended inlet size.


^{****}Refer to other relevant EQUITONE technical documentation for more details regarding minimum sizing for ventilation.


INSTALLATION

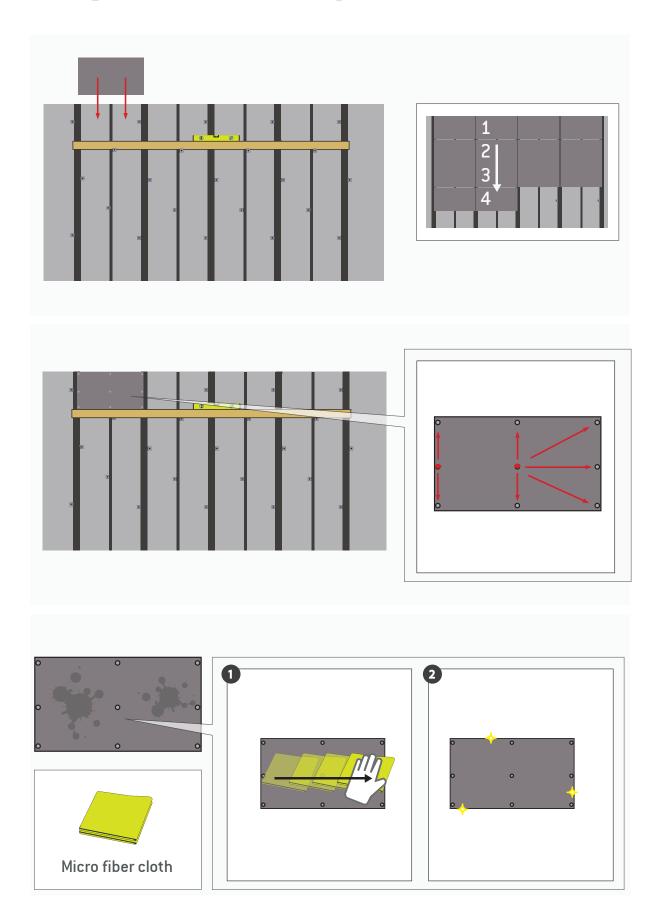

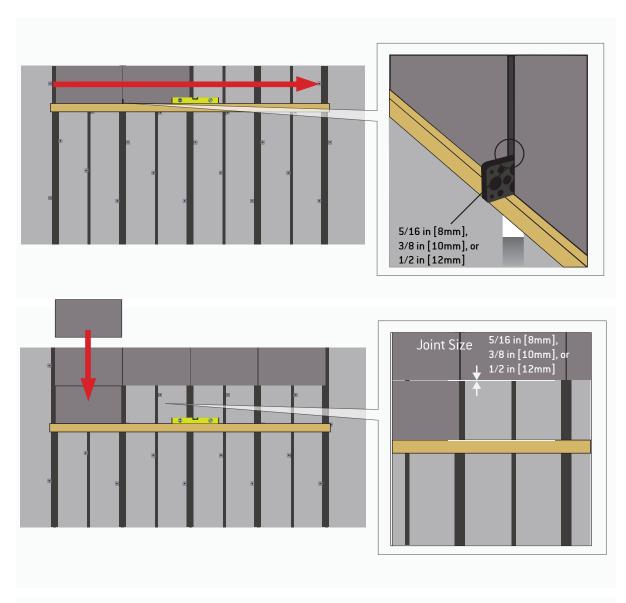


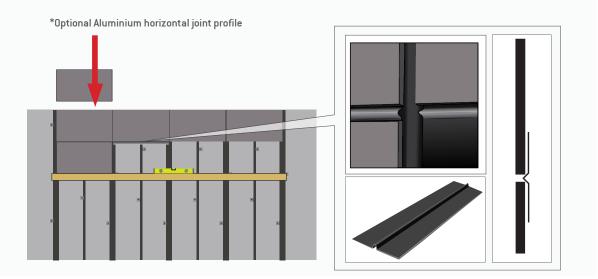

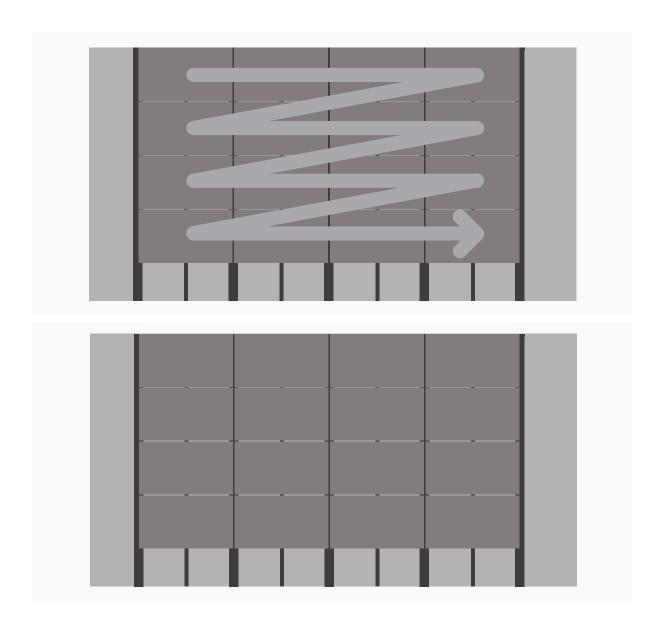

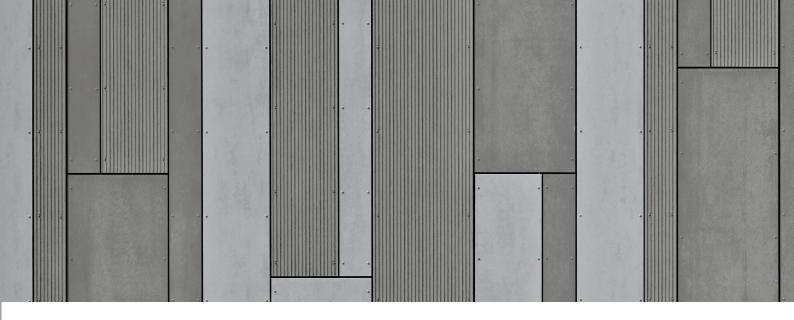



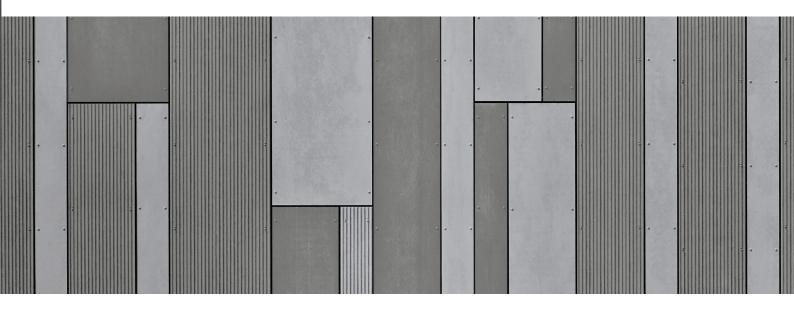

equitone.com

Follow us:

equitone facade

p equitone facade